

# Quick Installation Guide

## **Introduction**

The IGS-9168GP is a managed Ethernet switch with 16x10/100/1000Base-T(X) ports and 8x100/1000Base-X SFP ports. With complete support of Ethernet redundancy protocols, O-Ring (recovery time <30ms for over 250 connected devices) and MSTP (RSTP/STP compatible) can protect your mission-critical applications from network interruptions or temporary malfunctions. With a wide operating temperature from -40~75°C, the device can be managed centralized via ORing's proprietary Open-Vision managment utility as well as via Web-based interfaces, Telnet and console (CLI).

# **₽** Package Contents

The device is shipped with the following items. If any of these items is missing or damaged, please contact your customer service representative for assistance.

Contents	Pictures	Number
IGS-9168GP		X 1
CD		X 1
DIN-rail Kit		X 1
Wall-mount Kit		X 2
Console Cable		X 1
QIG	D	X 1

# Preparation

Before you begin installing the switch, make sure you have all of the package contents available and a PC with Microsoft Internet Explorer 6.0 or later, for using web-based system management tools.

### Safety & Warnings



Elevated Operating Ambient: If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (Tma) specified by the manufacturer.



Reduced Air Flow: Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.




Mechanical Loading: Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.

# **IGS-9168GP**


Circuit Overloading: Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

#### Dimension

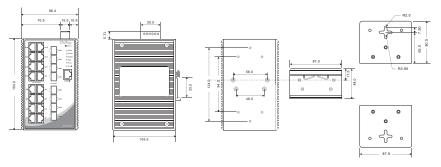


### Panel Layouts

#### Front View

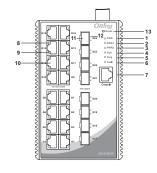


- 2. PWR1 LED 3. PWR2 LED
- 4. R.M. status LED
- 5. Ring status LED 6. Faulty relay indicator
- 7. Console port
- 8. Link/action LED for Gigabit Ethernet ports
- 9. Speed LED for Gigabit Ethernet ports
- 10. Gigabit Ethernet ports
- 12. Link/Act LED for SFP port
- 13. Reset button

#### **Rear View**

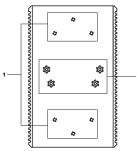

1. Wall-mount screw holes 2. Din-rail screw holes

#### Top Panel

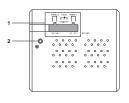

1. Terminal blocks: PWR1. PWR2 (12-48V DC), Relay

2. Ground wire.


# **Industrial Managed Gigabit Switch**

## Installation

#### DIN-rail Installation

Step 1: Slant the switch and screw the Din-rail kit onto the back of the switch, right in the middle of the back panel

Step 2: Slide the switch onto a DIN-rail from the Din-rail kit and make sure the switch clicks into the rail firmly.

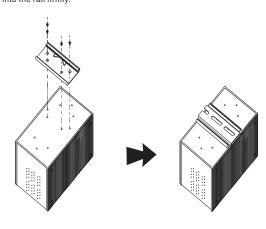


#### Wall-mounting

Step 1: Screw the two pieces of wall-mount kits onto both ends of the rear panel of the

switch. A total of six screws are required, as shown below.

Step 2: Use the switch, with wall mount plates attached, as a guide to mark the correct locations of the four screws.

Step 3: Insert a screw head through the large parts of the keyhole-shaped apertures, and then slide the switch downwards. Tighten the screws for added stability

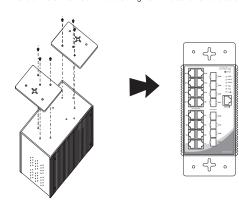

### Network Connection

The IGS-9168GP has standard Ethernet ports, According to the link type, the switch uses CAT 3, 4, 5,5e UTP cables to connect to any other network devices (PCs. servers, switches, routers, or hubs). Please refer to the following table for cable specifications.

### Cable Types and Specifications:

10/100 Base-T(X) RJ-45 Por	
Pin Number	Assignments
1	TD+
2	TD-
3	RD+
4	Not used
5	Not used
6	RD-
7	Not used
8	Not used



INDUSTRIAL

# Quick Installation Guide

# **IGS-9168GP**

# **Industrial Managed Gigabit Switch**

#### Max. Length Cat. 3, 4, 5 100-ohm UTP 100 m (328 ft) RJ-45 10BASE-T Cat. 5 100-ohm UTP UTP 100 m (328 ft) Cat. 5 / Cat. 5e 100-ohm UTP

For pin assignments for different types of cables, please refer to the following

1000Base-T RJ-45 Port	
Pin Number	Assignment
1	BI_DA+
2	BI_DA-
3	BI_DB+
4	BI_DC+
5	BI_DC-
6	BI_DB-
7	BI_DD+
8	BI_DD-

10/100 Base-T(X) MDI/MDI-X		
Pin Number MDI port		MDI-X port
1	TD+(transmit)	RD+(receive)
2	TD-(transmit)	RD-(receive)
3	RD+(receive)	TD+(transmit)
4	Not used	Not used
5	Not used	Not used
6	RD-(receive)	TD-(transmit)
7	Not used	Not used
8	Not used	Not used

1000Base-T MDI/MDI-X		
Pin Number	MDI port	MDI-X port
1	BI_DA+	BI_DB+
2	BI_DA-	BI_DB-
3	BI_DB+	BI_DA+
4	BI_DC+	BI_DD+
5	BI_DC-	BI_DD-
6	BI_DB-	BI_DA-
7	BI_DD+	BI_DC+
8	BI_DD-	BI_DC-

Note: "+" and "-" signs represent the polarity of the wires that make up each wire pair.

#### **Console Port Pin Definition**

To connect the console port to an external management device, you need an RJ-45 to DB-9 cable, which is also supplied in the package. Below is the console port pin assignment information

PC (male) pin assignment	RS-232 with DB9 (female) pin assignment (RJ45-DB9 cable)	RJ45 pin assignment
PIN#2 RxD	PIN#2 RxD	PIN#2 RxD
PIN#3 TxD	PIN#3 TxD	PIN#3 TxD
PIN#5 GND	PIN#5 GND	PIN#5 GND

#### Wiring

### Power inputs

The switch supports dual redundant power supplies. Power Supply (PWR1) and Power Supply 2 (PWR2). The connections for PWR1,

PWR2 and the RELAY are located on the terminal block. STEP 1: Insert the negative/positive wires into the V-/V+ terminals,

STEP 2: To keep the DC wires from pulling loose, use a small flatblade screwdriver to tighten the wire-clamp screws on the front of the terminal block connector.

#### Relay contact

The two sets of relay contacts of the 6-pin terminal block connector are used to detect userconfigured events. The two wires attached to the fault contacts form an open circuit when a user-configured when an event is triggered. If a user-configured event does not occur, the fault circuit remains closed.

#### Grounding

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screws to the grounding surface prior to connecting

## Configurations

After installing the switch, the green power LED should turn on. Please refer to the following tablet for LED indication.

LED	Color	Status	Description
PWR	Green	On	DC power on
PWR1	Green	On	DC power module 1 activated
PWR2	Green	On	DC power module 2 activated
R.M	Green	On	Ring Master
	Green	On	Ring enabled
Ring		Blinking	Ring structure is broken (i.e. part of the ring is
			disconnected)
Fault	Amber	On	Faulty relay (power failure or port disconnected)
10/100/1000	Base-T(X) Gigabit Etl	nernet ports	
LNIV/ACT	LNK/ACT Green	On	Port link up
LNK/ACI		Blinking	Data transmitted
	Green	On	Port link at 1000Mbps
Speed	Amber	On	Port link at 100Mbps
	Green/Amber	Off	Port link at 10Mbps
SFP	•		
LNK/ACT	Green	On	Port link up
LINN/ACT		Blinking	Data transmitted

Follow the steps to set up the switch:

1. Launch the Internet Explorer and type in IP address of the switch. The default static IP address is 192.168.10.1



2. Log in with default user name and password (both are admin). After logging in, you should see the following screen. For more information on configurations, please refer to the user manual. For information on operating the switch using ORing's Open-Vision management utility, please go to ORing website.



#### Resetting

To reboot the switch, press the **Reset** button for 2-3 seconds.

To restore the switch configurations back to the factory defaults, press the Reset button for 5 seconds.



# **→** Specifications

ORing Switch Model	IGS-9168GP		
Physical Ports			
10/100/1000Base-T(X) Ports in R345 Auto MDI/MDIX	16		
100/1000Base-X with SFP port	8		
Technology	•		
Ethernet Standards	IEEE 802.3 for 108ase-T IEEE 802.3 to for 1008ase-T IEEE 802.3 to for LACP (Link Aggregation Control Protocol) IEEE 802.3 to for LACP (Link Aggregation Control Protocol) IEEE 802.3 to for COS (Class of Service) IEEE 802.1 to for VLAN Tagging IEEE 802.1 to for NETP (Rapid Spanning Tree Protocol) IEEE 802.1 to for NETP (Rapid Spanning Tree Protocol) IEEE 802.1 to for NETP (Rapid Spanning Tree Protocol) IEEE 802.1 to for NETP (Rapid Spanning Tree Protocol) IEEE 802.1 to for NETP (Rapid Spanning Tree Protocol) IEEE 802.1 to for NETP (Rapid Spanning Tree Protocol)		
MAC Table	8K		
Priority Queues	8		
Processing	Store-and-Forward		
Switch Properties	Switch Indency: 7 us Switch bandwith: 48Gbps Max. Number of Available VLANs: 4095 VLAN ID Range: 1 to 4094 IGMP multicast groups: 256 for each VLAN Port rate limiting: User Define		
Jumbo frame	Up to 9.6K Bytes		
Security Features	Device Binding security feature Enable/disable ports, MAC based port security Port based network access control (802.1x) VLAM (802.1) to segregate and secure network traffic Radius centralized password management SNWP/3 encrypted authentication and access security Https/SSH enhance network security		
Software Features	STP/RSTP/RSTP (LEEE 802.10/w/s) Redundant Ring (O-Ring) with recovery time less than 30ms over 250 units TOS/Diffser's supported Quality of Service (802.1p) for real-time traffic VLM (802.1Q) with VLM tagging and GVRP supported IGMP Sneoping for multicast filtering IP-based bandwidth management OS/DIODS author of the support of the supported of the support of the		
Network Redundancy	O-Ring, Open-Ring, O-chain, STP, RSTP, MSTP		
Warning / Monitoring System	Syslog server / client to record and view events Include SMTP for event warning notification via email Event selection support		
RS-232 Serial Console Port	RS-232 in R345 connector with console cable. Baud rate setting: 115200bps, 8, N, 1		
Power			
Redundant Input power	Dual DC inputs. 12-48VDC on 6-pin terminal block (Max. Rating is 60VDC on Rev.2)		
Power consumption(Typ.)	11 watts max.		
Overload current protection	Present		
Reverse polarity protection	Present		
Physical Characteristic			
Enclosure	IP-30		
Dimension (W x D x H)	96.4 (W) x 105.5(D) x 154(H) mm (3.8 x 4.15 x 6.06 inch)		
Weight (g)  Environmental	1190 9		
Storage Temperature	-40 to 85°C (-40 to 185°F)		
Operating Temperature	-40 to 75°C (-40 to 167°F)		
Operating Humidity	5% to 95% Non-condensing		
Regulatory Approvals			
	FCC Part 15, CISPR (EN55022) class A		
EMI	EN61000-4-2 (ESD), EN61000-4-3 (RS), EN61000-4-4 (EFT), EN61000-4-5 (Surge), EN61000-4-6 (CS), EN61000-4-8, EN61000-4-1		
EMS EMS	2 (CS), 2 (CS)		
	IEC60068-2-27		
EMS			
EMS Shock	IEC60068-2-27		